

Honeywell

ADEMCO VISTA-120
Security System
With Scheduling

User Guide

Your Honeywell security system is designed for use with devices manufactured or approved by Honeywell for use with your security system. Your Honeywell security system is not designed for use with any device that may be attached to your security system's keypad or other communicating bus if Honeywell has not approved such device for use with your security system. Use of any such unauthorized device may cause damage or compromise the performance of your security system and affect the validity of your Honeywell limited warranty. When you purchase devices that have been manufactured or approved by Honeywell, you acquire the assurance that these devices have been thoroughly tested to ensure optimum performance when used with your Honeywell security system.

TABLE OF CONTENTS

SYSTEM OVERVIEW	5	How User Codes Affect the Common Area	25
General	5	ACCESSING OTHER PANELS	26
A Partitioned System	5	Single-Partition Single-Panel Mode	26
Panel Linking	6	Multi-Partition Multi-Panel Mode	27
Zones	6	Multi-Panel View Mode	28
Fire Protection	6	Priority of Displays for Multi-Partition and Multi-Panel Modes	29
Burglary Protection	7	CHECKING FOR OPEN ZONES	30
Alarms	7	Using the [*] READY Key	30
Memory of Alarm	7	BYPASSING PROTECTION ZONES	31
Speed Key (Macros)	8	Using the [6] BYPASS Key	31
Using Schedules	8	Quick Bypass	32
Device Timers	8	Displaying Bypassed Zones	32
To Access Another Partition (GOTO Command)	8	Using the [3] STAY key	33
Master Keypad Operation	9	ARMING PERIMETER ONLY	34
Self-Help Feature	9	Using the [7] INSTANT Key	34
Phone Access & Voice Response Capability	9	ARMING ALL PROTECTION	35
ABOUT THE KEYPADS	10	Using the [2] AWAY Key	35
General	10	ARMING ALL PROTECTION	36
FUNCTIONS OF THE KEYPAD	11	Using the [4] MAXIMUM Key	36
ENTRY/EXIT DELAYS	14	DISARMING AND SILENCING ALARMS	37
General Information	14	Using the [1] OFF Key	37
SECURITY CODES & AUTHORITY LEVELS	15	Memory of Alarm	37
General Information	15	USING THE KEYSWITCH	38
Duress Code	15	General	38
Quick Arming	15	Arming	38
Authority Levels	16	Disarming	38
General Rules on Authority Levels and Changes	17	CHIME MODE	39
To Exit User Edit Mode	17	Using the [9] Key	39
To Add a User	18	VIEWING ALARM COMPANY MESSAGES	40
To Change a User's Code	20	General Information	40
To Delete a User	20	Using Panic Keys	41
ACCESSING OTHER PARTITIONS	21		
To Access Another Partition	21		
Global Arming	21		
Master Keypad Operation	22		
Common Area Operation	24		

SPEED KEY (MACROS)	42	TESTING THE SYSTEM	56
General Information.....	42	Using the 5 TEST Key.....	56
Defining	42	Testing Your System	56
Executing.....	43	FIRE ALARM SYSTEM.....	57
ACCESS DOOR CONTROL	44	In Case Of Fire Alarm.....	57
General Information.....	44	Silencing A Fire Alarm.....	57
USING #70 RELAY MENU MODE	45	Typical Trouble Displays	58
General Information.....	45	Power Failure	59
USING SCHEDULES.....	46	MAINTAINING YOUR SYSTEM	60
Delaying the Closing Time	46	Taking Care of Your System	60
Temporary Open/Close Schedules	46	Replacing Batteries in Wireless	
Programming Temporary Schedules	47	Sensors	60
PROGRAMMING DEVICE TIMERS	49	Silencing Low Battery Warning Tones	
General Information.....	49	at the Keypad	61
USING #77 INSTANT ACTIVATION		Routine Care	61
MODE	51	QUICK GUIDE TO SYSTEM	
EVENT LOG PROCEDURES	54	FUNCTIONS.....	62
General Information.....	54	SUMMARY OF AUDIBLE	
To Display The Event Log	54	NOTIFICATION	64
		INDEX	68

System Overview

General

Your Honeywell security system consists of a main control panel, at least one keypad, and various sensors strategically positioned throughout the premises. The system offers you three forms of protection: burglary, fire and emergency. The keypad provides full control of system operation.

The system uses microcomputer technology to monitor all protection zones and system status and provides appropriate information for display on the keypad(s) used with the system, and initiates appropriate alarms. Your system may also have been programmed to automatically transmit alarm or status messages over the phone lines to a central alarm monitoring station.

This manual is designed to help you become comfortable operating your system. Each function is explained in step-by-step detail. We recommend you read the SYSTEM OVERVIEW section to become familiar with the terminology and the basic features of the system.

NOTE: If you have a Symphony (Advanced User Interface) connected to your system, refer to the Symphony User Guide for operating instructions.

A Partitioned System

A partitioned system shares one physical alarm system among different users, each with their own requirements. For the most part, you as a user need not know about other users and their structure in the system, but from time to time, you may see display messages that indicate the system is in use by another user. Do not be concerned, this is normal. Refer to the ACCESSING OTHER PARTITIONS section for additional information.

System Overview (cont'd)

Panel Linking

Panel Linking networks up to eight VISTA-120 control panels, enabling a user to control the features of all control panels from a single location. The Panel Linking is ideal for multi-building environments (e.g. a shopping mall, college campus, etc.).

The system provides the following three modes to access other “linked” control panels:

- Single-Partition, Single-Panel – displays status of a partition on a remote control panel and allows control of that remote control panel.
- Multi-Partition, Multi-Panel Mode – displays status and allows arming/disarming of multiple partitions at once on a remote control panel.
- Multi-Panel View Mode – displays status and allows arming/disarming of multiple remote control panels at a time.

Zones

Your system's sensing devices have been assigned to various "zones." For example, the sensing device on your Entry/Exit door may have been assigned to zone 001, sensing devices on windows in the master bedroom to zone 002, and so on. These numbers will appear on the display, along with an alpha descriptor for that zone (if programmed), when an alarm or trouble condition occurs.

Fire Protection

The fire protection portion of your security system (if used) is always on and will sound an alarm if a fire condition is detected. Refer to the FIRE ALARM SYSTEM section for important information concerning fire protection, smoke detectors and planning emergency exit routes from your house.

System Overview (cont'd)

Burglary Protection

The burglary protection portion of your system must be turned on or "armed" before it will sense burglary alarm conditions. Your system provides four modes of burglary protection: STAY, AWAY, INSTANT and MAXIMUM, and even allows you to BYPASS selected zones of protection while leaving the rest of the system armed. The system also provides a CHIME mode, for alerting users to the opening and closing of doors and windows while the system is disarmed. Refer to the other sections of this manual for procedures for using these features.

The following table lists the four different arming modes and the results of each.

Arming Mode	Features For Each Arming Mode		
	Exit Delay	Entry Delay	Perimeter Armed
AWAY	Yes*	Yes	Yes
STAY	Yes	Yes	Yes
INSTANT	Yes	No	Yes
MAXIMUM	Yes*	No	Yes

*If final contact arming has been enabled by your installer, you have unlimited exit delay. This means your system will not arm until the exit door is either opened and closed or just closed (if opened initially).

Alarms

When an alarm occurs, both the keypad and external sounders will sound, and the keypad will display the zone(s) causing the alarm. If your system is connected to a central monitoring station, an alarm message will also be sent. To stop the alarm sounding, simply disarm the system.

Memory of Alarm

When an alarm condition occurs, the keypad displays the number(s) of the zone(s) that caused the problem, and displays the type of alarm (ex. FIRE, ALARM). It remains displayed until it is cleared by disarming the system (see DISARMING THE SYSTEM section).

System Overview (cont'd)

Speed Key (Macros)

The system can store a string of up to 32 keystrokes, which can be activated anytime by simply pressing the “**A, B, C, or D**” keys. This feature can be used to make it easy to perform multiple functions at once (such as going to another partition to bypass a zone), or it can be used to simplify an everyday, repeated procedure. Refer to the SPEED KEY section for procedures for using this feature.

Using Schedules

Your system may have been programmed with schedules for automatically arming, disarming and activating various devices and/or performing other system functions at predetermined times. Users can modify some of these schedules by manually delaying a closing time, using temporary schedules, or by programming special user schedules. Refer to the USING SCHEDULES section at the end of this manual for scheduling related procedures.

Device Timers

The system provides up to 20 "timers" that can be used to control various devices, such as lights or appliances. These timers are similar in concept to the individual appliance timers that might be purchased at a department store. The devices that can be controlled are programmed into the system by the installer. Up to 96 of these devices can be programmed. Refer to the PROGRAMMING DEVICE TIMERS section for procedures.

To Access Another Partition (GOTO Command)

Each keypad is assigned a default partition for display purposes, and will show only that partition's information. But, if the user is authorized, a keypad in one partition can be used to perform system functions in another partition, by using the GOTO command. Note that only those partitions authorized and programmed by the installer can be accessed in this manner.

To GOTO another partition, enter your security code, then press [*] followed by the desired partition number (1-8).

The keypad will remain in the new partition until directed to go to another partition, or until 120 seconds has elapsed with no keypad activity. Entering your security code, pressing [*] followed by [0] will return the keypad to its original partition.

System Overview (cont'd)

Master Keypad Operation

A "Master" keypad is one on which the status of all 8 partitions is displayed simultaneously. A user can get more information about a certain partition by simply entering [*] + the desired partition number (1-8). To log on to the "Master" partition (9) using the **GOTO** command, and to perform any functions at a Master keypad, a user must have access to all partitions.

Self-Help Feature

Abbreviated user's instructions are built into the system that can be easily viewed on the alpha keypad's message display screen. This feature will prove particularly useful if this manual is not conveniently accessible when you need to perform a system procedure with which you are not familiar.

To view the abbreviated instructions:

Simply press and hold down the function key of interest until the description starts to appear (about 5 seconds) and then release it. The system must be "READY TO ARM" to perform this function.

Refer to the FUNCTIONS OF THE KEYPAD section for descriptions of each key function.

Phone Access & Voice Response Capability

Your system may include a 4286 VIP or TeleCommand Telephone access module that will permit you to access the system via a multi-frequency, push-button phone, either on-premises or by call-in when away. The phone access feature will enable you to do the following:

- Receive synthesized voice messages via the telephone regarding the status of the security system.
- Arm and disarm the system and perform most function commands via the telephone, with voice confirmation provided after each command entry.
- Control 4204/4204CF relays devices and lights and appliances through the #70 Manual Relay Activation mode.

Complete information regarding the use of this feature is provided in a separate manual entitled PHONE ACCESS USER'S GUIDE, which accompanies the 4286 VIP or TeleCommand Telephone access module.

About The Keypads

General


<p>IMPORTANT: If the keypad beeps rapidly upon entering the premises, it indicates that an alarm has occurred during your absence. LEAVE IMMEDIATELY and CONTACT THE POLICE from a safe location nearby.</p>

NOTE: If you have a Symphony (Advanced User Interface) connected to your system, refer to the Symphony User Guide for operating instructions for this unit.

Your keypads allow you to control all system functions. The keypads feature a telephone style (digital) keypad and a Liquid Crystal Display (LCD) that shows the nature and location of all occurrences. These keypads can display system messages in the local language. Abbreviated user's instructions can be displayed (see Self Help paragraph in the SYSTEM OVERVIEW section). These keypads can also be programmed with custom zone descriptors. Keypad display back lighting is programmable to always stay on or to light only when a key is pressed, then turn off a few minutes later.

The keypads also feature a built-in sounder that will sound during alarms and troubles. It will also "beep" during certain system functions, such as during entry/exit delay times, during CHIME mode, and when depressing keys to perform system functions (to acknowledge the key press). These sounds can be optionally suppressed in some of your keypads (so as not to disturb other users of the system). Ask your installer if this has been done.

Functions Of The Keypad

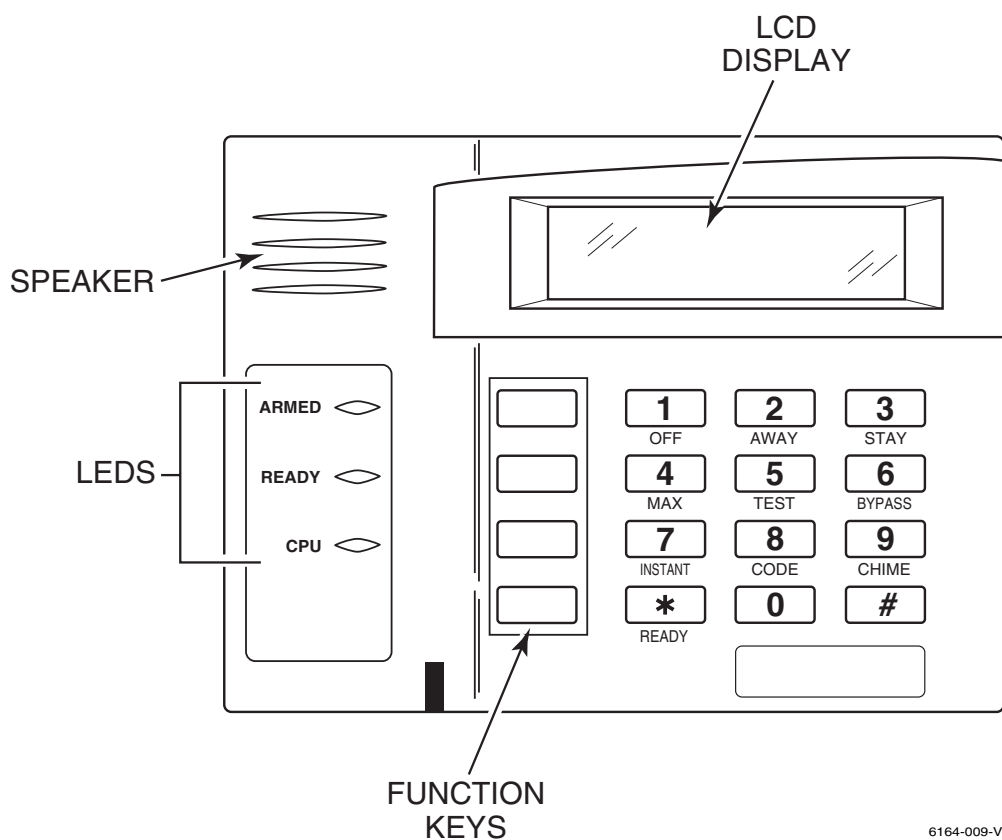

6164-009-V0

IMPORTANT!: When using the keypad to enter codes and commands, sequential key depressions must be made within 3 seconds of one another. If 3 seconds elapses without a key depression, the entry is aborted and must be repeated from its beginning.

Note: The Keypad Code Tamper option locks out all keypads in the partition following the entry of 21 keystrokes without entering a valid code + command sequence (within a 15-minute period) and lasts a total of 15 minutes. This is also true for any wireless keypads in the partition. Check with your installer to see if this option has been enabled in your system.

Functions Of The Keypad (cont'd)

ALPHA DISPLAY WINDOW: A 2-line, 32-character Liquid Crystal Display (LCD). Displays protection point identification and system status, messages, and user instructions.

1 OFF : Disarms the burglary portion of the system, silences alarms and audible trouble indicators, and clears visual alarm trouble after the problem has been corrected.

2 AWAY : Completely arms both perimeter and interior burglary protection by sensing an intruder's movements through protected interior areas as well as guarding protected doors, windows, etc. Late arrivals can enter through an entry delay zone without causing an alarm if the system is disarmed before the entry delay time expires.

3 STAY : Arms the perimeter burglary protection, guarding protected doors, windows and other perimeter protection points, and sounds an alarm if one is opened. Allows automatic bypassing of certain areas, which allows movement within your house without causing an alarm. Late arrivals can enter through an entry delay zone without causing an alarm if the system is disarmed before the entry delay time expires. See *ARMING PERIMETER ONLY* for a full explanation of the STAY key.

4 MAXIMUM : Arms in manner similar to AWAY mode, but eliminates the entry delay period, thus providing maximum protection. An alarm will occur immediately upon opening any protection point, including entry delay zones.

5 TEST : Tests the system and alarm sounder if disarmed.

6 BYPASS : Removes individual protection zones from being monitored by the system. Displays previously bypassed protection zones.

7 INSTANT : Arms in manner similar to STAY mode, but turns off the entry delay period, offering greater security while inside and not expecting any late arrivals. An alarm will occur immediately upon opening any perimeter protection point, including entry delay zones.

8 CODE : Allows the entry of additional user codes that can be given to other users of the system.

Functions Of The Keypad (cont'd)

9 CHIME : Turns on & off the CHIME mode. When on, any entry through a protected delay or perimeter zone while the system is disarmed will cause a tone to sound at the Keypad(s).

*** READY** : When depressed prior to arming the system, the keypad will display all open protection zones within the keypad's home partition. This key is also used to display all zone descriptors that have been programmed for your system, by holding the key down for at least 5 seconds.

: Permits ARMING of the system without use of a security code ("Quick Arm", if programmed).

KEYS 0-9: Used to enter your individual security access code(s).

LED READY INDICATOR: (GREEN) Lit indicates system is ready to be armed, while unlit indicates system not ready.

LED ARMED INDICATOR: (GREEN) Lit when the system has been armed (STAY, AWAY, INSTANT or MAXIMUM).

CPU INDICATOR: (YELLOW) Lit when a CPU failure has been detected inside the keypad.

SPEAKER: Source of audible internal warning and confirmation sounds, as well as alarms (see "Summary of Audible Notifications").

FUNCTION KEYS: These keys can be used for Speedkey (macros) functions or panic keys. Refer to the SPEEDKEY (MACROS) and PANIC KEYS sections for descriptions of these functions.

Entry/Exit Delays

General Information

Your system has installer-programmed time delays, known as exit delay and entry delay. Whenever you arm your system, **exit delay** gives you time to leave through the designated exit door without setting off an alarm. Exit delay begins immediately after entering any arming command, and applies to all modes of arming protection. If programmed, a slow beeping will sound throughout the exit delay period.

Entry Delay gives you time to disarm the system when you reenter through the designated entrance door. But the system must be disarmed before the entry delay period ends, or an alarm will occur. The keypad will beep during the entry delay period, reminding you to disarm the system. You can also arm the system with no entry delay at all by using either INSTANT or MAXIMUM arming modes. These modes provide greater security while on the premises or while away for extended periods of time. See your installer for your delay times.

Security Codes & Authority Levels

General Information

At the time of installation, you were assigned an authority level and a personal four-digit security code, known only to you and yours. The security code must be entered when arming and disarming the system. The authority level defines the system functions that you can perform.

As an additional safety feature, other users that do not have a need to know your code can be assigned different security codes, and each user can be given a different authority level. Users are identified by "user numbers", which are assigned when assigning a user's security code.

All codes can be used interchangeably when performing system functions within the limits of each code's authority level (a system armed with one user's code can be disarmed by another user's code), with the exception of the Operator Level C code. See AUTHORITY LEVELS on the following page for details regarding authority levels.

If more than 20 key presses are made within a 15-minute period without entering a valid command sequence, the system will ignore all subsequent key presses for the next 15 minutes. Check with your installer to see if this option has been enabled in your system.

Important: Only users assigned for user numbers 001-050 can perform panel linking functions.

Duress Code

This feature is intended for use if you are forced to disarm or arm the system under threat. When used, the system will act normally, but can silently notify the central station of your situation, if that service has been provided. The duress code is pre-assigned by the installer during installation (authority level 6).

Important: This code is useful only when the system is connected to a central station.

Quick Arming

Note that if "Quick Arming" was programmed by the installer, the [#] key can be pressed in place of the security code when arming the system. The security code must always be used to disarm the system, however.

Security Codes & Authority Levels (cont'd)

Authority Levels

Authority levels define the system functions a particular user can perform. Depending on the authority assigned to you, there are certain system functions you may be prohibited from performing. In summary, there are six authority levels, each having certain system restrictions as shown below.

Level 1 Master: Can perform all system functions in assigned partitions, and can add, delete or change Manager and Operator level users. Master codes are added by the Installer.

Level 2 Manager: Can perform system functions in assigned partitions, and can add, delete or change Operator level users.

Level 3 Operator A: Can perform system functions in assigned partitions, but cannot add or delete other users.

Level 4 Operator B: Same as Operator A, except Operator B cannot bypass zones of protection.

Level 5 Operator C: Can arm the system in assigned partitions, but cannot disarm the system **unless** the system was armed with this code. This code is typically assigned to someone who has a need to arm/disarm the system only at certain times (such as a baby-sitter).

Level 6 Duress: Can arm and disarm the system, but also sends a silent panic alarm to the central station, if that service is connected.

To view your authority level and system capabilities:

1. Enter your code + [*] + [*].
2. The keypad will display the partition(s) that you are authorized to operate, and your user number and authority level in each partition.

Security Codes & Authority Levels (cont'd)

General Rules on Authority Levels and Changes

- A user may not delete or change the user code of the SAME or HIGHER authority than which he is assigned.
- A user may only ADD users to a LOWER authority level.
- A user may assign access codes only to those partitions to which the user adding the code has access. (ex. a user with access to only partition 1 cannot assign codes in partition 2.)
- The only way to assign a user's authority level is by using the "Add A User" procedure. To change a user's authority level, that user must first be deleted, then added again.
- A user can only be DELETED or CHANGED from within the partition he is assigned.
- User numbers must be entered as 3-digit entries. Single digit user numbers must be preceded by a "00" (example, 003, 004, etc.). Security codes are entered as 4-digit numbers.
- Before assigning a security code, be sure it does not conflict with any DURESS code.

Note: When adding, changing or deleting users, all other alpha keypads in that partition will display "User Edit Mode – Please Stand By", and key depressions (except Panic) at those keypads will be ignored. Panic key depressions will cause an alarm and terminate user entry.

To Exit User Edit Mode

You can exit any of the user edit modes described on the following pages at any time by doing the following:

1. Press either or , or don't press any key for 10 seconds.
2. System returns to normal mode.

Security Codes & Authority Levels (cont'd)

To Add a User

IMPORTANT: Temporary users should not be shown how to use any system function they do not need to know (e.g. bypassing protection zones).

CODE

1. Enter Master or Manager code and press the key.
2. Enter the new user's 3-digit User Number (002-150).
3. Enter 4-digit security code for that user. The following prompts will appear.

ADD NEW USER? 0 = NO , 1 = YES

Enter 1 to add a new user code. Entering 0 will change the existing user's code to the code entered in step 3. See Changing A User's Code section.

USER NUMBER = 003 ENTER AUTH. LEVEL
--

Enter the authority level, 1-6, for this user within this partition.

1=master 2=manager 3=operator A
4=operator B 5=operator C 6=duress code

ACCESS GROUP? ENTER 0-8

If access schedules have been programmed, this prompt appears. Enter the user's access group number (1-8) if this user should have limited access to the system. Enter 0 if no access group should be assigned.

RF BUTTON ? 0 = NO , 1 = YES

This prompt will appear if a 5800 series button transmitter has been supplied and has not yet been assigned to a user. Press 1 if a button transmitter will be assigned to this user. Otherwise press 0.

ENTER BUTTON ZN # (001-128)

If assigning a button transmitter, this prompt will appear. Enter the button's zone number (see your installer for zone number).

MULTI-ACCESS ? 0 = NO , 1 = YES

If you as a user have access to other partitions, the keypad will prompt for ability of this new user to access (GOTO) those partitions. Press 0 (NO) or 1 (YES). If no, the system activates this user code and exits "Add a User" mode. If yes, the keypad prompts for the Global Arm option for this user.

Security Codes & Authority Levels (cont'd)

GLOBAL ARM ? 0 = NO , 1 = YES

Press 1 (YES) if this user will be allowed to try to arm more than one partition at the same time. Press 0 if this user will arm only his assigned partition.

PART.2 - SHOP? 0 = NO , 1 = YES

The keypad now prompts for the user's access to the next partition (see GOTO command). Again press 0 or 1. If yes, the system will automatically assign a user number for use in that partition and will prompt for authority level and global arm options for this user within the partition (see previous steps).

PART. 1 A0* WHSE USER 003 AUTH=3G.

When all partitions have been displayed, the keypad will scroll through the partition(s) to which access has been assigned, and will display the user number, authority level and global arm option for each. The "G" after the authority level indicates that the global arm feature is active for this user in the displayed partition. The "*" indicates the partition from which this user can be changed or deleted. The "." at the end of the second line indicates that this user sends open/close reports. Open/close reporting is automatically active for any users added by you, if you have open/close reporting active.

Security Codes & Authority Levels (cont'd)

To Change a User's Code

1. Enter Master or Manager code and press the CODE 8 key + user number to be changed.
2. Enter the new code for that user.

ADD NEW USER?
0 = NO , 1 = YES

The system will recognize that the user number is already in use and will prompt whether or not this is a new user. Enter 0 to change the existing user's code to the code entered in step 3.

USER 002 CHANGED
SUCCESSFULLY

The system will confirm that the change is allowed based on authorization level, and if so, will put the new code into effect.

Note that if changing one's own code, the system will prompt for the new code to be re-entered. This prevents accidentally changing one's own code.

To Delete a User

1. Enter Master or Manager code and press the CODE 8 key + user number to be deleted.
2. Enter Master or Manager code first entered.

OK TO DELETE
0 = NO , 1 = YES

The system will recognize that the User number is already in use and will prompt to confirm that it should be deleted. Press 0 (NO) or 1 (YES).

USER CODE
DELETED

If yes, that user's code will be removed from all partitions to which it was assigned, and all authorization levels and other information about that user will be deleted. Note that a user can only be deleted from the partition in which it was first assigned, and can only be deleted by a user with a higher authority level. A User's security code cannot be deleted by oneself.

Accessing Other Partitions

To Access Another Partition

Each keypad is assigned a default partition for display purposes, and will show only that partition's information. But, if the user is authorized, a keypad in one partition can be used to perform system functions in other partitions by using the **GOTO** command. Note that only those partitions authorized and programmed by the installer can be accessed in this manner.

To GOTO another partition:

1. Enter your security code, then press **READY** + partition number (0-8).

Entering partition number 0 will return the keypad to its original partition.

2.

LOG-ON TO	AAAA
PART. X	COMPLETE

 The keypad will remain in the new partition until directed to go to another partition, or until 2 minutes has elapsed with no keypad activity.

AAAA = alpha descriptor programmed by the installer

X = partition number

Global Arming

The Global Arming option may be assigned for use by some users. If Global Arming was enabled for use with your security code, a keypad prompt (message) shown below appears after pressing one of the arming function keys (STAY, INSTANT, AWAY, MAXIMUM, OFF).

ARM	P	1	2	3	4	5	6	7	8
HIT	0-8	XXX	-	X	-	-			

The prompt displays all the partitions. The user may only arm/disarm the partitions they are assigned access to.

To select the partition(s) that are to be armed, enter the desired number 1-8. An "X" will appear under that partition. Entering a partition's number again will delete the "X" and that partition will not arm when this prompt is exited.

Pressing 0 will turn all partitions the user is assigned access to on/off.

When completed, press * to exit. All the partitions with the "X" will then arm/disarm.

Accessing Other Partitions (cont'd)

Global Arming Notes:

- When performing a Global Arm, if there are faults in any of the selected partitions, the system will enter a Summary Mode. Faulted zones in all the selected partitions will be displayed. These faults must be corrected or bypassed. This Summary Mode will end in approximately 120 seconds if no keys are pressed.
- When performing a Global Disarm, if any of the selected partitions has a condition which would cause the keypad to beep (e.g., alarm memory or a trouble condition), the system enters a Summary Mode and displays the condition. This Summary Mode will end in approximately 120 seconds if no keys are pressed.

Master Keypad Operation

A "Master" keypad is one that reflects the status of the entire system (Partitions 1-8) on its display. This is useful because it eliminates the need for a security officer in a building to have to "log-on" to various partitions from one partition's keypad to find out where an alarm has occurred.

A description of a typical display follows:

SYSTEM	1	2	3	4	5	6	7	8
STATUS	R	R	N	N	A	T	*	B

The status of each partition is directly below the partition number on the display. Possible status indications include:

A = Armed Away	S = Armed Stay	M = Armed Maximum
I = Armed Instant	R = Ready	N = Not Ready
B = Bypassed/Ready	* = Alarm	T = Trouble
F = Fire Alarm	P = AC Power Failure	L = Low System Battery
C = Comm Fail		

To obtain more information regarding a particular partition, enter [*] + [Partition No.] (i.e., *4). This will allow viewing *only* of that partition. In order to affect that partition, the user must log on with a code that has access to that partition. Also, in order for a user of any partition to log onto the "Master" partition (Partition 9) to view the status of *all* partitions, and to perform any functions at the Master keypad, that user must have access to all partitions. Otherwise, access will be denied.

Accessing Other Partitions (cont'd)

The following is an example of what would be displayed for a fault condition on Zone 002 (Loading Dock Window) on Partition 1 (Warehouse) when logging on from a keypad on Partition 9:

WHSE DISARMED
HIT * FOR FAULTS

This is the normal display that appears at Partition 1's keypad(s). Pressing * will display:

FAULT 002 LOADING
DOCK WINDOW

Additional zone faults will be displayed one at a time. To display a new partition's status, press * + [Partition No.]. This will display the status of the new partition.

The "Armed" LED on a Master keypad will be lit only if *all* partitions have been armed successfully. The "Ready" LED will be lit only if *all* partitions are "ready to arm."

The sounder on a Master keypad will reflect the sound of the most critical condition on all of the partitions. The priority of the sounds is as follows:

- A. Pulsing fire alarm sounds
- B. Steady burglar alarm sounds
- C. Trouble sounds

The sounder may be silenced by pressing any key on the Master keypad.

Accessing Other Partitions (cont'd)

Common Area Operation

When an installation consists of a partition that is shared by users of other partitions in a building, that shared partition may be assigned as a “common area” partition for the system. An example of this might be in a medical building where there are two doctors and a common entrance area.

This option employs logic for automatic arming and disarming of the common area. Partitions may be set to affect and/or attempt to arm the common area. This will affect the way the common area will react when arming or disarming activity occurs in another partition.

Partitions that **affect** the common area will cause the following to occur:

- When the first partition that affects the common area is disarmed, the common area will also be disarmed.
- The common area cannot be armed unless every partition selected to affects the common area is armed.
- Arming the last partition that affects the common area **will not** automatically attempt to arm the common area.

Partitions set to **arm** the common area will cause the following to occur:

- When the first partition that affects the common area is disarmed, the common area will also be disarmed.
- The common area cannot be armed unless every partition selected to affects the common area is armed.
- Arming the last partition programmed to arm the common area will automatically attempt to arm the common area. If any faults exist in the common area partition, or another partition that affects the common area is disarmed, the common area cannot be armed, and the message “UNABLE TO ARM COMMON AREA PART” will be displayed.

The following chart summarizes how the common area partition will operate:

Partition Affects Common area	Partition Arms Common area	Disarms When Partition Disarms	Attempts to Arm When Partition Arms	Can Be Armed if Other Partitions Disarmed
NO	NO	NO	NO	YES
YES	NO	YES	NO	NO
YES	YES	YES	YES	NO
NO	YES	---ENTRY NOT ALLOWED---		

Accessing Other Partitions (cont'd)

How User Codes Affect the Common Area

Codes with “Global” Arming

If your code is given “global arming” when it is defined, the system displays a prompt that will ask “Arm all?” or “Disarm all?” whenever you try to arm or disarm the partitions you have access to from an alpha keypad. This allows you to pick and choose the partitions to be armed or disarmed and eliminates the “automatic” operation of the common area. Keep in mind, however, that if attempting to arm all the partitions you have access to, and another affecting partition is disarmed, (one you do not have access to) you will not be able to arm the common area, and the message “UNABLE TO ARM COMMON AREA PART” will be displayed.

Codes with “Non-Global” Arming

If arming with a non-global code, the common area partition operation will be automatic, as described in the previous table.

Other Methods of Arming/Disarming

When arming or disarming a partition that affects and/or arms the common area in one of the following manners, common area logic remains active:

- Quick-Arm
- Keyswitch
- Wireless Button
- Wireless Keypad

Accessing Other Panels

If the user is authorized, a keypad in one panel can be used to perform system functions in other panels by using one of the panel linking methods described below. **Note that only users 001 to 050 can be authorized to access other panels.**

The system provides three modes to access other “linked” control panels:

- Single-Partition, Single-Panel – displays status of a partition on a remote control panel and allows control of that remote control panel.
- Multi-Partition, Multi-Panel Mode – displays status and allows arming/disarming of multiple partitions at once on a remote control panel.
- Multi-Panel View Mode – displays status and allows arming/disarming of multiple remote control panels at a time.

NOTE: A user will not be able to access or view partitions or panels that they have not been assigned to.

Single-Partition Single-Panel Mode

To access the single-partition single panel mode, perform the following steps:

1. Enter your security code + + + .
 2. Enter the panel ID# (**01-08**) of the panel you want to link to.
 3. Enter the partition number of the panel.
 4. The keypad displays “AWAITING PANEL LINK.” After a few seconds, the keypad displays the status of the partition along with the panel ID number and partition number flashing in the upper right-hand corner. The user now has full control of the remote control panel. All functions can be performed except the following:
 - Those limited by the user’s authority level.
 - The user cannot enter Installer Program mode
 - The user cannot execute another panel linking mode.
- NOTE:** To execute another panel linking mode or to access a different remote panel, the user must first exit this mode (return to the original control panel).
5. To exit, enter your security code + + + . After a few seconds, the keypad displays the status of the original partition for the keypad. Also, this mode will end in approximately 120 seconds if no keys are pressed.

Accessing Other Panels (cont'd)

Multi-Partition Multi-Panel Mode

To access the multi-partition multi panel mode, perform the following steps:

1. Enter your security code + + +
2. The keypad displays the following:

PANELnn	1	2	3	4	5	6	7	8
STATUS	x	x	x	x	x	x	x	x

where “nn” = panel id # (**01-08**), “12345678” are the partition #'s and “xxxxxxxx” is the status of each partition of that panel. Possible status indications include:

A = Armed Away	S = Armed Stay	M = Armed Maximum
I = Armed Instant	R = Ready	N = Not Ready
B = Bypassed/Ready	* = Alarm	T = Trouble
F = Fire Alarm	P = AC Power Failure	L = Low System Battery
C = Comm Fail		

NOTES:

See the table that follows for priority of displays.

A “.” under a partition number indicates the user does NOT have access to that partition.

Use the following keys to perform a function in this mode:

Press to attempt to disarm all partitions.

Press to attempt to arm AWAY all partitions.

Press to attempt to arm STAY all partitions.

Press to attempt to arm MAXIMUM all partitions.

Press to attempt to arm INSTANT all partitions.

Press to read the status of the next panel.

Press to read the status of the previous panel.

Press to exit mode. After a few seconds, the keypad displays the status of the original partition of the original panel for the keypad. Also, this mode will end in approximately 120 seconds if no keys are pressed.

Accessing Other Panels (cont'd)

NOTES:

When performing any of the arming commands, if there are faults in any of the partitions, none of the partitions will arm. These faults must be corrected or bypassed before attempting to arm.

The user cannot execute another panel linking mode. To execute another panel linking mode or to access a different remote panel, the user must first exit this mode (return to the original control panel).

Multi-Panel View Mode

To access the multi-panel view mode, perform the following steps:

1. Enter your security code + + +
2. The keypad displays the following:

ALLPANEL	1	2	3	4	5	6	7	8
STATUS	x	x	x	x	x	x	x	x

where "12345678" are the panel id #s and "xxxxxxx" is the overall status of each panel. Possible status indications include:

A = Armed Away	S = Armed Stay	M = Armed Maximum
I = Armed Instant	R = Ready	N = Not Ready
B = Bypassed/Ready	* = Alarm	T = Trouble
F = Fire Alarm	P = AC Power Failure	L = Low System Battery
C = Comm Fail		

NOTE: See the table that follows for priority of displays.

Use the following keys to perform a function in the Multi-Panel View Mode:

Press to attempt to disarm all partitions on all panels.

Press to attempt to arm AWAY all partitions on all panels.

Press to attempt to arm STAY all partitions on all panels.

Press to attempt to arm MAXIMUM all partitions on all panels.

Press to attempt to arm INSTANT all partitions on all panels.

Press to exit mode. After a few seconds, the keypad displays the status of the original partition of the original panel for the keypad. Also, this mode will end in approximately 120 seconds if no keys are pressed.

Accessing Other Panels (cont'd)

NOTES:

When performing any of the arming commands, if there are faults in any of the partitions of a panel, the system will not arm that panel, but will arm all other partitions of the other panels.

The user cannot execute another panel linking mode. To execute another panel linking mode or to access a different remote panel, the user must first exit this mode (return to the original control panel).

Priority of Displays for Multi-Partition and Multi-Panel Modes

This table shows the priority of displays if more than one of the conditions exists at the same time.

Priority	Description	Display
1	Fire Alarm	F
2	All Other Alarms	*
3	AC Loss	P
4	Comm Fail	C
5	System Low Battery	L
6	Trouble	T
7	Bypass	B
8	Not Ready	N
9	Ready	R
10	Armed STAY	S
11	Armed AWAY	A
12	Armed INSTANT	I
13	Armed MAXIMUM	M

For example, if you are in the Multi-Partition Mode and a partition has a zone with a trouble condition, a zone bypassed, and a zone faulted, the system displays “T” for the Trouble.

If you are in Multi-Panel Mode and one of the panels has one partition armed STAY, a second partition armed AWAY and a third partition armed INSTANT, the system displays “S” for STAY.

Checking For Open Zones

Using the READY Key

Before arming your system, all protected doors, windows and other protection zones must be closed or bypassed (see BYPASSING section). Otherwise the keypad will display a "Not Ready" message. Using the **READY** key will display all zones that are faulted, making it easier for you to secure any open zones.

 
Note that your installer can set up your system to allow you to arm the system even though an **exit route** zone is faulted at the time of arming. All exit route zones must be closed by the time the exit delay expires, or the system will go into alarm.

The installer can also program the system to **NOT** go into alarm if an exit route is still open at the end of the normal exit delay time, but instead will **automatically bypass** the faulted zone and arm the rest of the system. This may prevent false alarms when people are slow to close the exit route door(s). Check with your installer to determine the options programmed in your system.

To show faulted zones:

DISARMED - PRESS * TO SHOW FAULTS

Note: Some keypads light a green LED when the system is ready. If not lit, the system is not ready to be armed.

1. Do not enter security code, but simply press  **READY** .

FAULT 005 FRONT UPSTAIRS BEDROOM
DISARMED READY TO ARM

Typical fault display

Secure or bypass the zones displayed before arming the system. The "Ready" message will be displayed[†] when all protection zones have been either closed or bypassed.

[†] **NOTE:** All or part of this message may be replaced by a customized message programmed by the installer. Bear this in mind whenever the instructions indicate that the "DISARMED" or "READY" message will be displayed.

Bypassing Protection Zones

Using the **6** BYPASS Key

This key is used when you want to arm your system with one or more zones intentionally unprotected. Bypassed zones are unprotected and will not cause an alarm when violated while your system is armed. All bypasses are removed when an OFF sequence (security code plus OFF) is performed. Bypasses are also removed if the arming procedure that follows the bypass command is not successful.

Note: The system will not allow fire or emergency zones to be bypassed.

To bypass zones, the system must be disarmed first.

BYPASS

1. Enter your security code and press **6** .
2. Enter zone number(s) for the zones to be bypassed (e.g., 001, 002, 003, etc.).

Important! All single-digit numbers must be preceded by “00” (for example, enter 001 for zone 1).

3.

BYPASS 007 FRONT
UPSTAIRS BEDROOM

Typical bypass message
When finished, the keypad will display the word BYPASS along with each bypassed zone number. Wait for these zones to be displayed before arming. Arming the system before bypassed zones are displayed eliminates all bypasses.
4.

DISARMED BYPASS
READY TO ARM

 Arm the system as usual when the keypad displays "ready" to arm message.

Important!

Your installer may have set a limit on the number of zones that you are allowed to bypass in a partition. If you attempt to exceed that limit, the system will not allow you to bypass those zones that exceed the limit. Ask your installer if a limit has been set and, if so, what that limit is.

Bypassing Protection Zones (cont'd)

Quick Bypass

Your system allows you to easily bypass all open (faulted) zones without having to enter zone numbers individually.

Note: All bypasses are removed when an OFF sequence (security code plus OFF) is performed.

To use the Quick Bypass feature:

1. Enter your security code and press **BYPASS** 6 then press #.
2.

BYPASS 007 FRONT
UPSTAIRS BEDROOM

Typical bypass message In a few moments, all open zones will be displayed along with the word BYPASS. Wait for these zones to be displayed before arming. Arming the system before bypassed zones are displayed eliminates all bypasses.
3.

DISARMED BYPASS
READY TO ARM

 Arm the system as usual when the keypad displays the "ready" to arm message. Bypassed zones are unprotected and will not cause an alarm when violated while your system is armed.

Displaying Bypassed Zones

For determining what zones have been previously bypassed. Bypassed zones can be displayed only when system is disarmed.

1. Enter your security code and press **BYPASS** 6 .
2. Wait for all bypassed zones to be sequentially displayed.

Arming Perimeter Only

(With Entry Delay ON)

Using the **3** STAY key

Use this key when you are staying home, but might expect someone to use the entrance door later.

When armed in STAY mode, the system will sound an alarm if a protected door or window is opened, but you may otherwise move freely throughout the premises. Late arrivals can enter through the entrance door without causing an alarm, but they must disarm the system within the entry delay period or an alarm will occur.

Close all perimeter windows and doors before arming (see CHECKING FOR OPEN ZONES section)

1. Enter your security code and press **STAY** **3**.
2.

ARMED ***STAY* ZONE BYPASSED

 The keypad beeps three times, displays the armed message.
Note: "ZONE BYPASSED" in this display simply indicates that some zones of protection are not armed when using STAY mode.

NOTE: Failure to close an open exit route zone before the exit delay time ends may result in that zone being automatically bypassed or in alarm, depending on how your system was programmed by your installer. Consult your installer for the configuration of your system.

Arming Perimeter Only

(With Entry Delay OFF)

Using the 7 INSTANT Key

Important: If you are using a Symphony (Advanced User Interface), **NIGHT** mode is the same as INSTANT.

Use this key when you are staying home and do not expect anyone to use the entrance door.

When armed in INSTANT mode, the system will sound an alarm if a protected door or window is opened, but you may otherwise move freely throughout the premises. The alarm will also sound immediately if anyone opens the entrance door.

Close all perimeter windows and doors before arming (see CHECKING FOR OPEN ZONES section)

INSTANT

1. Enter your security code and press 7.

2.

ARMED *INSTANT
ZONE BYPASSED

 The keypad beeps three times, displays the armed message.

Note: "ZONE BYPASSED" in this display simply indicates that some zones of protection are not armed when using INSTANT mode.

NOTE: Failure to close an open exit route zone before the exit delay time ends may result in that zone being automatically bypassed or in alarm, depending on how your system was programmed by your installer. Consult your installer for the configuration of your system.

Arming All Protection

(With Entry Delay ON)

Using the **2** AWAY Key

Use this key when no one will be staying on the premises.

When armed in AWAY mode, the system will sound an alarm if a protected door or window is opened, or if any movement is detected inside the premises. You may leave through the entrance door during the exit delay period without causing an alarm. You may also reenter through the entrance door, but must disarm the system within the entry delay period or an alarm will occur.

Close all perimeter windows and doors before arming (see CHECKING FOR OPEN ZONES section)

1. Enter your security code and press **AWAY** **2** .
2.

ARMED **AWAY** YOU MAY EXIT NOW

 The keypad will beep twice and will display the armed message.
Note: The "YOU MAY EXIT NOW" portion of the message disappears when exit delay expires.

<p>NOTE: Failure to close an open exit route zone before the exit delay time ends may result in that zone being automatically bypassed or in alarm, depending on how your system was programmed by your installer. Consult your installer for the configuration of your system.</p>
--

Arming All Protection

(With Entry Delay OFF)

Using the 4 MAXIMUM Key

Use this key when the premises will be vacant for extended periods of time such as vacations, etc., or when no one will be moving through protected interior areas.

When armed in MAXIMUM mode, the system will sound an alarm if a protected door or window is opened, or if any movement is detected inside the premises. You may leave through the entrance door during the exit delay period without causing an alarm, but an alarm will be sounded as soon as someone reenters.

Close all perimeter windows and doors before arming (see CHECKING FOR OPEN ZONES section).

1. Enter your security code and press 4 .
2.

ARMED *MAXIMUM*
YOU MAY EXIT NOW

 The keypad will beep twice and will display the armed message.

MAXIMUM

Note: The "YOU MAY EXIT NOW" portion of the message disappears when exit delay expires.

NOTE: Failure to close an open exit route zone before the exit delay time ends may result in that zone being automatically bypassed or in alarm, depending on how your system was programmed by your installer. Consult your installer for the configuration of your system.

Disarming And Silencing Alarms

Using the 1 OFF Key

The **OFF** key is used to disarm the system and to silence alarm and trouble sounds. See "SUMMARY OF AUDIBLE NOTIFICATION" section for information which will help you to distinguish between FIRE and BURGLARY alarm sounds.

IMPORTANT: If you return and the main burglary sounder is on, DO NOT enter the premises, but call the police from a nearby safe location. If you return after an alarm has occurred and the main sounder has shut itself off, the keypad will beep rapidly upon entering, indicating that an alarm has occurred during your absence. LEAVE IMMEDIATELY and CONTACT THE POLICE from a nearby safe location.

To disarm the system and silence burglary or fire alarms:

1. Enter your security code and press 1 ^{OFF} .

DISARMED
READY TO ARM

2. The Ready message will be displayed (if no alarms have occurred while armed) and the keypad will beep once to confirm that the system is disarmed.

Memory of Alarm

The keypad displays the zone number and type of alarm for any zone that has an alarm condition. These messages will remain displayed until cleared by a user. If an alarm has occurred, note the zone number displayed on the keypad and repeat step 1 above to clear the "Memory of Alarm" and restore the Ready message display. If the Ready message will not display, go to the displayed zone and remedy the fault (close windows, etc.). If the fault cannot be remedied, notify the alarm agency.

If the system was armed when the alarm occurred, repeat step 1 twice: once to disarm the system, a second time to clear the display.

Using The Keyswitch

General

Your system may be equipped with a keyswitch for use when arming and disarming a partition. A red and green light on the keyswitch plate indicate the status of your system as follows:

Green Light: Lights when the system is **disarmed and ready** to be armed (no open zones). If the system is disarmed and the green light is off, it indicates the system is not ready (one or more zones are open).

Red Light: Lights when system is armed or memory of alarm exists.

Lit Steady: Partition is **armed in AWAY** mode.

Slow Flashing: Partition is **armed in STAY** mode.

Rapid Flashing: Memory of alarm, indicating an alarm has occurred .


Arming

To arm in the AWAY mode, turn the key to the right for 1 second and release. Keypads will beep twice and the red light will stay on steady.

To arm in the STAY mode, turn the key to the right and hold for longer than 10 seconds, then release. Keypads will beep three times and the red light will flash slowly.

Disarming

To disarm the partition, turn the key to the right and release. If an alarm has occurred, the red light will be flashing rapidly (memory of alarm).

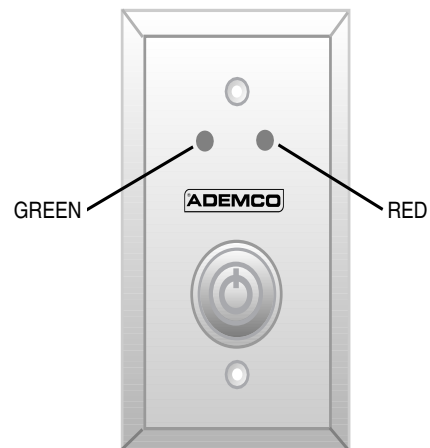

Chime Mode

Using the **9** Key

Your system can be set to alert you to the opening of a door or window while it is disarmed by using CHIME mode. When activated, three tones will sound at the Keypad whenever a protected perimeter door or window is opened, and the Not Ready message will be displayed. Pressing the **READY** key will display the open protection points.

Note that Chime mode can be activated only when the system is disarmed.

1. **To turn Chime Mode on**, enter the security code and press **9**.

CHIME MODE ON

The CHIME MODE ON message will appear for about two seconds then disappear. To display this message again (to determine whether chime mode is on or off), simply press and hold down the **CHIME key** for 5 seconds.

2. **To turn Chime Mode off**, enter the security code and press **9** again.

CHIME MODE OFF

The CHIME MODE OFF message will appear for about two seconds then disappear. To display this message again (to determine whether chime mode is on or off), simply press and hold down the **CHIME key** for 5 seconds.

Viewing Alarm Company Messages

General Information

Users of the system may periodically receive messages on their display screens from their monitoring agency or installer. When a message is waiting to be viewed, the message shown below will appear.

MESSAGE. PRESS 0
FOR 5 SECS.

1. Press and hold down 0 key for 5 seconds.
2. The message could take up to four screens to display all the information available.

NOTE: Any message sent by the central station downloader may be viewed at any partition's keypad.

Panic Keys

(For Manually Activating Silent And/Or Audible Alarms)

Using Panic Keys

Your system may have been programmed to use special key combinations to manually activate panic functions. The functions that might be programmed are Silent Emergency, Audible Emergency, Personal Emergency, and Fire. See your installer for the function(s) that may have been programmed for your system.

Active Panic Functions

(Your installer should note which function(s) is active in your system.)

Keys	Zone	Function
1 and *	995	
3 and #	996	
* and #	999	
A	995	
B	999	
C	996	

To use a paired key panic function, simply press both keys of the assigned pair at the same time.

If your keypad(s) have lettered keys for panic functions, press the designated key and hold down for at least 2 seconds to activate the panic function.

A silent emergency sends a silent alarm signal to the central station, but there will be no audible alarms or visual displays.

An audible emergency sends an emergency message to the central station (if connected) and will sound a loud, steady alarm at your keypad **and** at any external sounders that may be connected (**ALARM** plus a zone number would also be displayed).

A personal emergency alarm sends an emergency message to the central station (if connected) and will sound at Keypads, but not at external bells or sirens. (**ALARM** plus a zone number would also be displayed.)

A fire alarm sends a fire alarm message to the central station and will uniquely sound external bells and sirens (**FIRE** plus a zone number would also be displayed).

Speed Key (Macros)

General Information

The “A”, “B”, “C”, and “D” keys can be used to activate a string of commands up to 32 keystrokes each. These commands are known as a macro and are stored in the system’s memory. Typical Speed Key functions include:

- Arming sequences that involve first bypassing certain zones before arming.
- Seldom used but repeatable sequences.
- Relay activation sequences.

NOTE: If a macro includes an arming sequence and the user executing it has global arming, all partitions the user can global arm will arm.

Defining

To program a macro, enter your user code + [#] + [D]. The following appears:

ENTER SPEED KEY #
01-32 00=QUIT

Enter the 2-digit Speed Key number (01-32) being defined and press [*]. Enter up to 32 keystrokes. A Speed Key sequence can include different commands. Press the "D" key to separate different commands. For example, you may want to perform the following sequence.

GOTO partition 2.....Enter *2

Bypass zones 10 & 11Press bypass [6], then the zone numbers 010 & 011

Arm in maximum mode.....Press maximum [4] key

Return to partition 1Enter *1

To program that Speed Key sequence, type the following:

*2[D] 6010011[D] 4[D] *1[D][D]

Note that the "D" key is pressed after each command. Press "D" twice to complete the entry and exit.

NOTE: When defining Speed Key sequences, do not use the [#] key to represent Quick Arming. The system uses the code entered in response to the prompt to initiate commands in a Speed Key sequence, so the quick arm key is unnecessary. The system interprets the use of the [#] key in a Speed Key sequence as its designated function only.

Speed Key (Macros) (cont'd)

Executing

To execute a Speed Key sequence, do the following:

If a lettered key, A-B-C or D, has been assigned as a Speed Key, press and hold down the appropriate key (about 2 seconds). If a user code is required for any part of the Speed Key sequence, the following prompt appears. Otherwise, the Speed Key sequence automatically begins.

ENTER USER CODE *****

Access Door Control

General Information

Your system may be set up such that a locked access door (such as in a common area) can be unlocked momentarily or for a specific period of time, using a keypad command. Ask your installer if this has been done in our system.

There are four access door commands as follows:

- 1. Quick Unlock**
Enter your security code + [0]. The door will unlock for 2 seconds.
- 2. Timed Unlock of Assigned Door**
Enter your security code + [#] + 73. The door will unlock for a specific period of time programmed by the installer (using the ACS software).
- 3. Timed Unlock of User Selected Door**
Enter your security code + [#] + 74. A prompt will display for the specific access point to be unlocked and whether it is an entry or exit door. The selected door will unlock for a specific period of time programmed by the installer (using the ACS software).
- 4. Unlock of User Selected Door with Selected Function**
Enter your security code + [#] + 75 + access point + function. The functions available are Grant, Protect and Bypass. Grant will temporarily unlock a door to allow an access. Protect will cause a door to unlock only when a valid access is received. Bypass will cause a door to be permanently unlocked to allow continuous access.
- 5. Access control functions may also be executed using your security code + [#] + 77.**
See *Using #77 Instant Activation Mode* later in this manual.

Using #70 Relay Menu Mode

General Information

Your system may be set up so that certain lights or other devices can be turned on or off by using the #70 command from either a keypad or a telephone keypad (if 4286 VIP or TeleCommand module is used). Ask your installer if this has been done in your system.

To activate relays from a keypad, enter 4-digit security code + [#] +70. Follow the keypad prompts described below.

To activate relays using a telephone and 4286 VIP Module, first enter the 2-digit phone access code. If you are using the **TeleCommand module**, first enter the 4-digit phone access code. When the system acknowledges the access, enter 4-digit security code + [#] + 70. The following prompts/voice responses will begin.

Note: If your system is equipped with TeleCommand, it will not make voice announcements.

ENTER DEVICE NO. 00=QUIT 01

Voice: "ENTER DEVICE CODE NOW"

Enter the 2-digit number of the device to be activated.
Note that if an invalid number is entered, the system will simply ask you to reenter the number.

NN DEVICE IS OFF HIT 0=OFF , 1=ON

Voice: " <i>voice descriptor</i> DEVICE nn ON/OFF. FOR <i>voice descriptor</i> ON ENTER 1, FOR <i>voice descriptor</i> OFF ENTER 0"
--

Press 0 or 1 to turn the device off or on respectively.
"nn" represents the 2-digit device number and *voice descriptor* is the relay voice descriptor programmed by the installer.

NN DEVICE IS OFF HIT THE "*" KEY
--

Voice: " <i>voice descriptor</i> DEVICE nn ON/OFF. TO EXIT ENTER 00 NOW"

From a keypad, press * to continue. The ENTER DEVICE NO. prompt will appear.

From a telephone keypad, enter 00 to exit, or enter the next relay number to be programmed. The current on/off state of that relay will be annunciated as described above. Alternatively, if 6 seconds elapses with no key depression, the 4286 VIP module will annunciate the "ENTER DEVICE CODE NOW" message.

Using Schedules

Delaying the Closing Time

Your system's programmed schedules may automatically arm the system at a predetermined time. In the event a user must stay on the premises later than usual, users with master or manager authority levels can manually delay the automatic arming (closing) time up to 2 hours. **To delay the closing time:**

1. Enter your security code (master or manager authority levels only).
2. Press the key, followed by **82**.
3. A menu prompt will be displayed, asking for the number of hours of delay.

CLOSING DELAY? KEY 0-2 HOURS

Enter the desired number of hours of delay, 1 or 2.
The system automatically exits this mode after entry.

Note that the delay is from the **scheduled closing time**, not from the time the command is entered.

IMPORTANT: The selected delay cannot be **reduced** once it is set. A 1-hour delay can be **increased** to 2 hours, though.

4. The system will automatically send a message to the central station informing them that the programmed schedule has been changed.

Temporary Open/Close Schedules

Temporary schedules allow you to override the normal schedules programmed by the installer. Temporary schedules can be in effect for up to one week, and take effect as soon as they are programmed.

They are comprised of an arming (closing) time period and a disarming (opening) time period. A time period is simply a defined period of time, at the end of which arming or disarming will occur.

Before programming, use a worksheet similar to the one below to plan your schedule. This will make it easier when actually programming the schedule.

Arm/Disarm	Mon	Tue	Wed	Thu	Fri	Sat	Sun
Time periods							
Disarm Time period							
Start Time HH:MM							
Stop Time HH:MM							
Arm Time period							
Start Time HH:MM							
Stop Time HH:MM							

Using Schedules (cont'd)

Programming Temporary Schedules

Temporary schedules only affect the partition from which it is entered. Temporary schedules can be reused at later dates simply by scrolling (by pressing #) to the DAYS? prompt (described below) and activating the appropriate days. This should be considered when defining daily time periods. Note that only users with authority level of manager or higher can program temporary schedules.

To program temporary schedules:

1. Enter your security code.
2. Press the key followed by **81**.
3. The following prompts will appear.

MON DISARM WIND.
07:45 08:45

The cursor will be positioned on the tens of hours digit of the start time for Monday's disarm time period. Enter the desired hour. Press * to move to the minutes field. The minutes are entered in the same manner. Repeat for the stop time entry. Press the * key to move to the arming time period for Monday.

Press # to move to the next screen display without making changes.

MON ARM WINDOW
07:45 08:45

The cursor will be positioned on the tens of hours digit of the start time for the arm time period. Repeat the previous steps to enter the start and stop time for Monday's arming time period.

TUE DISARM WIND.
07:45 08:45

After the time periods for that day have been completed, the system will prompt for disarm and arm time periods for the next day. Repeat the procedure for all days of the week.

When all of the days have been completed, the system will ask which days are to be activated.

Using Schedules (cont'd)

DAYS ? MTWTFSS
HIT 0-7 X X

This is the prompt that actually activates the temporary schedule, and allows the temporary schedule to be customized to a particular week's needs. To select the days which are to be activated, enter the desired number 1-7 (Monday = 1). An "X" will appear under that day, indicating the previously entered schedule for that day is active. Entering a day's number again will deactivate that day. Pressing 0 will turn all days on/off.

The temporary schedule will only be in effect for the days which have the letter x underneath them. As the week progresses, the days are reset to the deactive state.

When completed, press * to exit the temporary schedule entry mode.

Programming Device Timers

General Information

Device timers consist of an ON time & an OFF time, and selected days of the week in which they are active. There are up to 20 timers that can be used to control various devices, such as lights or appliances. Your installer will have programmed the appropriate devices into the system (up to 96 devices can be programmed).

Each timer controls a single device (designated as an output number) that you select. For example, timer 1 might be set to turn the outside lights on at 19:00 and turn them off at 05:00. Timer 2 might turn on the air conditioner Monday-Friday at 08:30 to cool the premises before you arrive at 09:00, and turn it off at 18:00 when you are leaving at night. If desired, different timers can control the same device. For example, timer 2 could be used Monday-Friday as in the previous example, and timer 3 could be set to turn the air conditioner on and off at different times on Saturday.

To enter the device timer menu mode:

Enter your security code, then press the # key followed by 83.

OUTPUT TIMER # ?
01-20,00=QUIT 01

Up to 20 timers can be programmed. Each timer is identified by a number 1-20. Enter the desired timer number to be programmed (1-20). Press * to accept entry.

06 19:00 05:00
EXTER LITE 04

If that timer number has already been programmed, a summary screen will appear. In this example:

06 = Timer #

04 = Output Device # affected by this timer

EXTER LITE = Output Descriptor for Device 4

19:00 = Start Time;

05:00 = Stop Time

Press * to continue.

See your installer for device numbers.

00 ENTER OUTPUT#
00

Enter the desired output device number (1-96). As the number is entered, the device's description will appear.

To delete a previously programmed timer, enter 00 as the output number.

Programming Device Timers (cont'd)

00 ON TIME ? 00:00

Enter the time you want the device turned on using 00:01 - 23:59 format. The display will show the desired time. Press the * key to move to the next entry.

Enter 00:00 if this timer is not being used to turn something ON for the days selected below. (ex. using one timer to turn lights on one day and using another timer to turn them off on another day).

00 OFF TIME ? 00:00

Enter the time you want the device turned off using 00:01 - 23:59 format. When the display shows the desired time, press the * key to move to the next entry.

Enter 00:00 if this timer is not being used to turn something OFF for the days selected below. (ex. using one timer to turn lights on one day and using another timer to turn them off on another day).

00 DAYS? MTWTFSS HIT 0-7 X X

Select the days on which the device is to be activated by entering 1-7 (Monday = 1). An "X" will appear under that day, indicating the output for that day is active. Entering a day's number again will deactivate that day. Pressing 0 will turn all days on/off. The outputs will only be in effect for the days that have the letter x underneath them. As the week progresses, the days are reset to the inactive state, unless the permanent option is selected (next screen prompt). When completed, press * to continue.

00 PERMANENT ? 0 = NO, 1 = YES 0
--

Answering 1 (YES) means the system executes this timer continuously. Answering 0 (NO) means the system executes each day's output only once.

Using #77 Instant Activation Mode

The #77 Instant Activation Mode is used to activate outputs, bypass zones, etc. immediately upon exiting the #77 Mode. The actions that may be activated are relay commands, arm/disarm commands, zone bypassing commands, and open/close access conditions.

Relay Commands

<u>Action Code</u>	<u>Action Specifier</u>
01 Relay On	Relay #
02 Relay Off	Relay #
03 Relay Close for 2 seconds	Relay #
04 Relay Close for XX minutes *	Relay #
05 Relay Close for YY seconds *	Relay #
06 Relay Group On	Relay Group #
07 Relay Group Off	Relay Group #
08 Relay Group Close for 2 seconds	Relay Group #
09 Relay Group Close for XX minutes *	Relay Group #
10 Relay Group Close for YY seconds *	Relay Group #

* Check with your installer for the amount of time.

Arm/Disarm Commands

Activation times 1 (Beginning), 2 (End), 3 (During) are the only valid choices for automatic arming and disarming functions.

"During" can be used to arm or disarm the control for a specific time only.

For example, if "during" is selected with Arm-STAY, the system will automatically Arm-STAY at the beginning of the time period and automatically disarm at the end of the time period.

<u>Action Code</u>	<u>Action Specifier</u>
20 Arm-STAY	Partition(s)
21 Arm AWAY	Partition(s)
22 Disarm	Partition(s)
23 Force Arm STAY (Auto-bypass faulted zns)	Partition(s)
24 Force Arm AWAY (Auto-bypass faulted zns)	Partition(s)
25 Arm INSTANT	Partition(s)
26 Arm MAXIMUM	Partition(s)

Using #77 Instant Activation Mode (cont'd)

Bypass Commands

Activation times **1** (Beginning), **2** (End), **3** (During) are the only valid choices for bypass commands. If **3** (During) is selected for auto-bypassing, the system bypasses the zone(s) specified on a particular zone list at the beginning of the time period and unbypasses them at the end of the time period. If it is selected for auto unbypassing, the system removes the bypass at the beginning of the time period and restores the bypass at the end of the time period.

<u>Action Code</u>	<u>Action Specifier</u>
30 Auto bypass - Zone list	Zone list #
31 Auto unbypass - Zone list	Zone list #

Open/Close Time periods

Activation time **3** (During) is the only valid choice for these commands.

<u>Action Code</u>	<u>Action Specifier</u>
40 Enable Opening Time period by partition	Partition(s)
41 Enable Closing Time period by partition	Partition(s)
42 Enable Access Time period for access group	Access Group

Access Control Commands

<u>Action Code</u>	<u>Action Specifier</u>
55 Access Point Grant	Access Point #
56 Access Point Grant with Override	Access Point #
57 Access Point Protect	Access Point #
58 Access Point Bypass	Access Point #
59 Access Point Lock	Access Point #
60 Access Point Exit	Access Point #
61 Access Point Group Grant	Group #
62 Access Point Group Grant with Override	Group #
63 Access Point Group Protect	Group #
64 Access Point Group Bypass	Group #
66 Access Point Group Exit	Group #
67 Access Point Partition Grant	Partition #
68 Access Point Partition Grant with Override	Partition #
69 Access Point Protect by Partition	Partition #
70 Access Point Bypass by Partition	Partition #
71 Access Point Lock by Partition	Partition #
72 Access Point Exit by Partition	Partition #
73 Access Point Trigger On	Trigger #

Using #77 Instant Activation Mode (cont'd)

Access Control Commands (cont'd)

Action Code

74 Access Point Trigger Off

Additional Commands

Action Code

77 Access Point Group Enable

78 Access Point Group Disable

Action Specifier

Trigger #

Action Specifier

Group #

Group #

To enter the Instant Activation Mode:

Enter your security code, then press the [#] key followed by 77.

ACTION ?

Enter the code for the desired action. The action codes are the events that are to take place when either the system exits the #77 Mode or the scheduled time is reached, depending on the action selected.

Press [*] to continue.

Enter the action specifier. This defines what the action will affect (relay, relay group, partition, zone list, user group). The action specifier screen prompt varies, depending on the type of action selected.

As an example, if you selected "Auto Bypass" as the action, the action specifier prompt would be:

ZONE LIST ?

ARE YOU SURE ?

1 = YES 0 = NO 0

Enter **1** (YES) or **0** (NO).

Press [*] to continue.

QUIT MENU MODE?

1 = YES 0 = NO

Enter **1** (YES) or **0** (NO).

Press [*] to continue.

Event Log Procedures

General Information

The system has the ability to record various events in a history log wherein each event is recorded in one of five categories (listed below), with the time and date of its occurrence. The Event Log holds up to 512 events, with the oldest event being replaced by the logging of any new event after the log is full. Using an alpha keypad, the Event Log can be viewed one category at a time, or can display all events, regardless of category (ALL EVENT LOG). The system also allows selection of displaying the COMPLETE log, or only those events occurring since the last installer service (RECENT). In addition, events in the other partitions can be viewed by users authorized to access those partitions. Note that events are displayed in chronological order, from most recent to oldest.

To Display The Event Log

1. **Enter CODE + [#] + [6] + [0]**
2. **Select the display mode.**

RECENT: Displays only those events occurring since last Event Log Clear command was executed.

COMPLETE: Displays complete event log (up to 512 events).

Press the desired key, 0 or 1.

ENTER 0 = RECENT 1 = COMPLETE

3. **Select the partition, 0-8.**

Enter the partition number for the partition whose events are to be displayed.

Entering 0 (NO) will display all partitions' events.

SCAN LOG BY PART 0=NO 1-8=PART #

Event Logging Procedures (continued)

4. Use the [3] & [1] keys (for next and previous categories respectively) to display the categories of events.

Press [8] to select a category and display the first event. Press [8] again for each subsequent event.

Shows burglary alarm occurred in zone 3 (C03) of partition 1 (P1), at 00:02 on January 1.

P1 01/01 00:02 BURGLARY C003	<i>Typical Event Log Display</i>
---------------------------------	--

After the last event has been displayed, the END OF EVENT LOG message appears for a few seconds, then the system automatically displays the RECENT/COMPLETE mode select screen again (see step 2).

5. **To EXIT the Event Log:**

Press [*] at any time.

ALARM EVENT LOG TYPE CCC UUU	<i>Typical Category Select Screen</i>
---------------------------------	---

ALARM EVENT LOG

Displays time and date for zones that have either caused an alarm or have been restored in the selected partition.

CHECK EVENT LOG

Displays time and date for zones that have caused a trouble or supervisory condition in the selected partition.

BYPASS EVENT LOG

Displays time and date for zones that have been bypassed in the partition.

OPEN EVENT LOG

Displays time, date and user number or 6-character descriptor for the user, if programmed, for each arming and disarming of the system for the partition selected.

SYSTEM EVENT LOG

Displays time and date for system problems, such as AC Loss, low battery, etc., regardless of partition.

ALL EVENT LOG

Displays all categories of events in chronological order.

See your Installer for additional information concerning the event log.
--

Testing The System

(To Be Conducted Weekly)

Using the 5 TEST Key

The **TEST** key puts your system into Test mode, which allows each protection point to be checked for proper operation.

1. Disarm the system and close all protected windows, doors, etc. **READY** should be displayed.
2. Enter your security code and press the **TEST**
5 key.
3. The external sounder should sound for 3 seconds and then turn off. If the sounder does not sound, it may be due to dialer communication activity. Wait a few minutes and try again. If the sounder still does not sound, **CALL FOR SERVICE IMMEDIATELY**.
4. The keypad will sound a single beep every 15 seconds as a reminder that the system is in Test mode. Each time a protection zone is faulted (opened), the keypad should beep three times. If the sounder does not sound, **CALL FOR SERVICE IMMEDIATELY**.

Note that no alarm reports will be sent to the central monitoring station while the system is in Test mode.

Testing Your System

1. Open and close each protected door and window in turn and listen for three beeps. Each faulted protection point should appear on the display.
2. Walk in front of any interior motion detectors (if used) and listen for three beeps as movement is detected (wireless motion detectors have a 3-1/2 minute lockout between trips). The identification of the detector should appear on the display when it is activated.
3. Follow the manufacturer's instructions to test all smoke detectors to ensure that all are functioning properly. The identification of each detector (or the zone number of the zone assigned to the detector) should appear on the display when each is activated.
4. When all protection points have been checked, there should be no zone identification numbers displayed. If a problem is experienced with any protection point (no confirming sounds, no display), **CALL FOR SERVICE IMMEDIATELY**.
5. Turn off Test mode by entering the security code + the **OFF** key.

Fire Alarm System

Your fire alarm system (if installed) is on 24 hours a day, providing continuous protection. In the event of an emergency, the smoke and heat detectors automatically send signals to your Control, triggering a loud interrupting sound from the keypad and the optional exterior sounders. FIRE appears at your keypad and remains on until you silence the alarm.

In Case Of Fire Alarm

1. Should you become aware of a fire emergency before your detectors sense the problem, go to your nearest keypad and manually initiate an alarm by pressing the panic key assigned as FIRE emergency (if programmed by the installer) and hold down for at least 2 seconds.
2. Evacuate all occupants from the premises.
3. If flames and/or smoke are present, leave the premises and notify your local Fire Department immediately.
4. If no flames or smoke are apparent, investigate the cause of the alarm. The descriptor of the zone(s) in alarm appears at the keypad.

Silencing A Fire Alarm

1. Silence the alarm by entering your code and pressing the **OFF** key. To clear the display, enter your code and press the **OFF** key again.
2. If the keypad does not indicate a **READY** condition after the second **OFF** sequence, press the **READY** key to display the zone(s) that are faulted. Be sure to check that smoke detectors are not responding to smoke or heat producing objects in their vicinity. Should this be the case, eliminate the source of heat or smoke.
3. If this does not remedy the problem, there may still be smoke in the detector. Clear it by fanning the detector for about 30 seconds.
4. You can clear the display by entering your code + the **OFF** key.

Trouble Conditions

Typical Trouble Displays

The word **CHECK** or **TRBL** on the Keypad's display, accompanied by a rapid "beeping" at the Keypad, indicates that there is a trouble condition in the system.

To silence the beeping sound for trouble conditions, press any key.

- A display of **"CHECK"** or **"TRBL"** accompanied by a display of **"CALL SERVICE"** indicates that a problem exists with the system that eliminates some of the protection. **CALL FOR SERVICE IMMEDIATELY.**
- A display of **"CHECK"** or **"TRBL"** accompanied by a display of one or more zone descriptors indicates that a problem exists with those zone(s)*. First, determine if the zone(s) displayed are intact and make them so if they are not. If the problem has been corrected, the display of the zone descriptor(s) and **"CHECK"** or **"TRBL"** should disappear. If not, key an OFF sequence (Code plus OFF) to clear the display. If the display persists, **CALL FOR SERVICE IMMEDIATELY.**
- A display of **"CHECK"** or **"TRBL"** accompanied by a numeric display of **"6XX,"** where XX = 01-32, indicates a trouble on a supervised relay (corresponding relay number 01-32).
- A display of **"CHECK"** or **"TRBL"** accompanied by a numeric display of **"8XX,"** where XX = 00-30, indicates a trouble on a peripheral device (connected to the panel's keypad terminals) of a corresponding device address (00-30).
- A display of **"CHECK"** or **"TRBL"** accompanied by a numeric display of **"9XX,"** where XX = 00-99, indicates a system trouble exists (dialers, bell outputs, ground fault, etc.). These zones are as follows:
 - 970: Siren Supervision
 - 988: 2nd RF Receiver – not receiving signals
 - 990: 1st RF Receiver – not receiving signals
 - 997: Polling Loop Short
- A display of **"COMM. FAILURE"** at the Keypad indicates that a failure has occurred in the telephone communication portion of your system. **CALL FOR SERVICE IMMEDIATELY.**

Trouble Conditions (cont'd)

- A display of "**SYSTEM LO BAT**", accompanied by a once per minute "beeping" at the Keypad indicates that a low system battery condition exists. CALL FOR SERVICE IMMEDIATELY.
- A display of "**LO BAT**" and a zone descriptor, accompanied by a once per minute "beeping" at the Keypad indicates that a low battery condition exists in the wireless transmitter displayed. CALL FOR SERVICE IMMEDIATELY.
- A display of "**MODEM COMM**" indicates that the control is on-line with the central station's remote computer. The control will not operate while on-line.

Power Failure

If the message "**AC LOSS**" is displayed, the Keypad is operating on battery power only. If only some lights are out on the premises, check circuit breakers and fuses and reset or replace as necessary. CALL FOR SERVICE IMMEDIATELY if AC power cannot be restored.

SERVICING INFORMATION

Your local ADEMCO dealer is the person best qualified to service your alarm system. Arranging some kind of regular service program with him is advisable.

Your local ADEMCO dealer is:

Name: _____

Address: _____

Phone: _____

Maintaining Your System

Taking Care of Your System

The components of your security system are designed to be as free of maintenance as possible. However, there are some things you can do to make sure that your system is in reliable working condition.

1. Test your system weekly.
2. Test the system after any alarm occurs (see *TESTING THE SYSTEM*).

Replacing Batteries in Wireless Sensors

Wireless sensors may not have been used in your security system

Each wireless sensor in your system has a 9-volt or 3-volt battery. The system detects a low battery in any wireless sensor, including smoke detectors, the optional personal emergency transmitter, and the optional portable wireless keypad. (A low battery in a portable wireless keypad is detected as soon as one of its keys is pressed, and the keypad will display **00**.)

Alkaline batteries provide a minimum of 1 year of operation, and in most units and applications, provide 2–4 years of service. Actual battery life will depend on the environment in which the sensor is used, the number of signals that the transmitter in the sensor has had to send, and the specific type of sensor. Factors such as humidity, high or low temperatures or large swings in temperature, may all lead to the reduction of actual battery life in an installation.

If you have a low battery in a wireless sensor, a low battery message is displayed on the keypad.

In addition, a battery-operated smoke detector with a low battery also emits a single "chirp" sound once approximately every 20-30 seconds, identifying itself as the smoke detector with the weak battery. If you do not replace a smoke detector's low battery, the smoke detector may sound continuously, as if there were a fire alarm.

Note: The low battery message comes on as a warning that battery replacement in indicated sensor(s) is due within 30 days. In the meantime, the sensor(s) causing the low battery indication is still fully operational.

Important: Use only batteries recommended by your installer as replacement.

Maintaining Your System (cont'd)

Silencing Low Battery Warning Tones at the Keypad

The keypad's warning tones can be silenced by performing an OFF sequence (code plus OFF key), but the Keypad's low battery message display will remain on as a reminder that you have a low battery condition in one or more of your sensors. When you replace the weak battery with a fresh one, the sensor will send a "good battery" signal to the control as soon as the sensor is activated (opening/closing of door, window, etc.), causing the low battery display to turn off. If the sensor is not activated, the display will automatically clear within approximately 1 hour.

Routine Care

- Treat the components of your security system as you would any other electrical equipment. Do not slam sensor-protected doors or windows.
- Keep dust from accumulating on the keypad and all protective sensors, particularly on motion sensors and smoke detectors.
- The keypad and sensors should be cleaned carefully with a dry soft cloth. ***Do not spray water or any other fluid on the units.***

IN THE EVENT OF TELEPHONE OPERATIONAL PROBLEMS

In the event of telephone operational problems, disconnect the control by removing the plug from the RJ31X phone wall jack. We recommend that your certified installer demonstrate disconnecting the phones on the installation of the system. Do not disconnect the phone connection inside the control/communication. Doing so will result in the loss of your phone lines. If the regular phone works correctly after the control/communicator has been disconnected from the phone lines, the control communicator has a problem and should be returned for repair. If upon disconnection of the control/communicator there is still a problem on the line, notify the telephone company that they have a problem and request prompt repair service. The user may not under any circumstances (in or out of warranty) attempt any service or repairs to the system. It must be returned to the factory or an authorized service agency for all repairs.

Quick Guide To System Functions

FUNCTION	PROCEDURE	COMMENTS
Check Zones	Press [*].	To view faulted zones when is system not ready
Display All Descriptors	Press and hold [*] for 5 seconds.	Displays all alpha descriptors programmed by installer.
Arm System	Enter code. Press arming key desired (AWAY, STAY, INSTANT, MAXIMUM).	Arms system in mode selected.
Disarm System	Enter code. Press OFF [1].	Disarms system and silences alarms.
Bypass Zones	Enter code. Press BYPASS [6]. Enter zone numbers to be bypassed (use 3-digit entries).	Bypassed zones are unprotected and will not cause an alarm if violated.
Quick Bypass	Enter code. Press BYPASS [6]. Press [#].	Bypasses all faulted zones automatically.
Chime Mode	Enter code. Press CHIME [9].	Keypad will sound if doors or windows are violated while system disarmed.
Test Mode	Enter code. Press TEST [5]	Activates alarm sounder and allows sensors to be tested.
View Messages	Press and hold [0] for at least 5 seconds.	Message from central station will appear.
View User Capabilities	Enter user's code. Press [*] + [*].	Displays partitions & authority levels assigned to the user.
GOTO Partition	Enter security code. Press [*]. Enter partition number (1-8). 0 returns to default partition.	Allows a user at one keypad to perform functions in another partition, if that user is authorized to do so.
Self-Help	Press and hold any function key for at least 5 seconds.	Will display abbreviated instructions for the key pressed.
Add a User	Enter master/manager code. Press CODE [8]. Enter new user's user number. Enter code for that user. Enter authority for that user in this partition (1-5). Follow prompts, 1=Yes, 0=No.	Master & Manager level users can add users to the system, each with its own code and authority level.
Change a User's Code	Enter master/manager code. Press CODE [8]. Enter user's 3-digit number. Enter new code for that user. Press 0 (No) at prompt.	Master & Manager level users can change their own or other users' codes.

Quick Guide To System Functions (cont'd)

FUNCTION	PROCEDURE	COMMENTS
Delete a User	Enter master/manager code. Press CODE [8]. Enter user no. to be deleted. Enter master/manager code. Press 1 (Yes) at prompt.	Master & Manager level users can delete users. A user can only be deleted by a user with higher authority level.
Access Control	Enter security code. Enter 0.	Activate access relay for current partition.
	Enter security code Press [#]. Enter 73.	Request to enter or exit at a console.
	Enter security code Press [#]. Enter 74. Enter access point number.	Request to enter or exit at an access point.
	Enter security code. Press [#]. Enter 75. Enter access point number. Enter state (1-3)	Change the access point state.
Panel Linking	Enter security code (002-050) Press [#]. Enter 86.	Activate single-panel single-partition mode.
	Enter security code (002-050) Press [#]. Enter 85.	Exit single-panel single-partition mode.
	Enter security code (002-050) Press [#]. Enter 88.	Activate multi-partition multi-panel mode.
	Enter security code (002-050) Press [#]. Enter 87.	Activate multi-panel view mode.
	Enter 0.	Exit multi-partition multi-panel mode and multi-panel view mode.

Summary Of Audible Notification

(Alpha Display Keypads)

SOUND	CAUSE	DISPLAY
LOUD, INTERRUPTED* Keypad & External	FIRE ALARM	FIRE is displayed; descriptor of zone in alarm is displayed.
LOUD, CONTINUOUS* Keypad & External	BURGLARY/AUDIBLE EMERGENCY ALARM	ALARM is displayed; descriptor of zone in alarm is also displayed.
ONE SHORT BEEP (not repeated) Keypad only	a. SYSTEM DISARM b. SYSTEM ARMING ATTEMPT WITH AN OPEN ZONE. c. BYPASS VERIFY	a. DISARMED/READY TO ARM is displayed. b. The number and descriptor of the open protection zone is displayed. c. Numbers and descriptors of the bypassed protection zones are displayed (One beep is heard for each zone displayed). Subsequently, the following is displayed: DISARMED BYPASS Ready to Arm
ONE SHORT BEEP (once every 15 sec.) Keypad only	SYSTEM IS IN TEST MODE	Opened Zone identifications will appear.
ONE BEEP (every 60 sec.) Keypad only	LOW BATTERY AT A TRANSMITTER	LO BAT displayed with description of transmitter.
TWO SHORT BEEPS Keypad only	ARM AWAY OR MAXIMUM	ARMED AWAY or ARMED MAXIMUM is displayed. Red ARMED indicator is lit.
THREE SHORT BEEPS Keypad only	a. ARM STAY OR INSTANT b. ZONE OPENED WHILE SYSTEM IS IN CHIME MODE. c. ENTRY WARNING**	a. ARMED STAY ZONE BYPASSED or ARMED INSTANT ZONE BYPASSED is displayed. Red ARMED indicator is lit. b. CHIME displayed, descriptor of open protection zone will be displayed if the [*] key is pressed. c. DISARM SYSTEM OR ALARM WILL OCCUR is displayed.
RAPID BEEPING Keypad only	a. TROUBLE b. AC POWER LOSS ALERT*** c. MEMORY OF ALARM	a. CHECK displayed. Descriptor of troubled protection zone is displayed. b. AC LOSS displayed (may alternate with other displays that may be present). c. FIRE or ALARM is displayed; descriptor of zone in alarm is displayed.
SLOW BEEPING Keypad only	a. ENTRY DELAY WARNING** b. EXIT DELAY WARNING (if programmed)	a. DISARM SYSTEM OR ALARM WILL OCCUR is displayed. Exceeding the delay time without disarming causes alarm. b. ARMED AWAY or ARMED MAXIMUM is displayed along with You May Exit Now

* If a siren is used as external sounder, fire alarm is pulsed tone; burglary/audible emergency is steady tone.

** Entry warning may consist of three short beeps or slow continuous beeping, as programmed by your installer.

*** Loss of system battery power is not indicated or annunciated by the keypad (warnings are for loss of AC power only).

WARNING!

THE LIMITATIONS OF THIS ALARM SYSTEM

While this system is an advanced design security system, it does not offer guaranteed protection against burglary or fire or other emergency. Any alarm system, whether commercial or residential, is subject to compromise or failure to warn for a variety of reasons. For example:

- Intruders may gain access through unprotected openings or have the technical sophistication to bypass an alarm sensor or disconnect an alarm warning device.
- Intrusion detectors (e.g. passive infrared detectors), smoke detectors, and many other sensing devices will not work without power. Battery operated devices will not work without batteries, with dead batteries, or if the batteries are not put in properly. Devices powered solely by AC will not work if their AC power supply is cut off for any reason, however briefly.
- Signals sent by wireless transmitters may be blocked or reflected by metal before they reach the alarm receiver. Even if the signal path has been recently checked during a weekly test, blockage can occur if a metal object is moved into the path.
- A user may not be able to reach a panic or emergency button quickly enough.
- While smoke detectors have played a key role in reducing residential fire deaths, they may not activate or provide early warning for a variety of reasons in as many as 35% of all fires. Some of the reasons smoke detectors used in conjunction with this System may not work are as follows. Smoke detectors may have been improperly installed and positioned. Smoke detectors may not sense fires that start where smoke cannot reach the detectors, such as in chimneys, in walls, or roofs, or on the other side of closed doors. Smoke detectors also may not sense a fire on another level of a residence or building. A second floor detector, for example, may not sense a first floor or basement fire. Moreover, smoke detectors have sensing limitations. No smoke detector can sense every kind of fire every time. In general, detectors may not always warn about fires caused by carelessness and safety hazards like smoking in bed, violent explosions, escaping gas, improper storage of flammable materials, overloaded electrical circuits, children playing with matches, or arson. Depending upon the nature of the fire and/or the locations of the smoke detectors, the detector, even if it operates as anticipated, may not provide sufficient warning to allow all occupants to escape in time to prevent injury or death.
- Passive Infrared Motion Detectors can only detect intrusion within the designed ranges as diagrammed in their installation manual. Passive Infrared Detectors do not provide volumetric area protection. They do create multiple beams of protection, and intrusion can only be detected in unobstructed areas covered by those beams. They cannot detect motion or intrusion that takes place behind walls, ceilings, floors, closed doors, glass partitions, glass doors, or windows. Mechanical tampering, masking, painting or spraying of any material on the mirrors, windows or any part of the optical system can reduce their detection ability. Passive Infrared Detectors sense changes in temperature; however, as the ambient temperature of protected area approaches the temperature range of 32° to 40°C, the detection performance can decrease.

Alarm warning devices such as sirens, bells or horns may not alert people or wake up sleepers if they are located on the other side of closed or partly open doors. If warning devices sound on a different level of the residence from the bedrooms, then they are less likely to waken or alert people inside the bedrooms. Even persons who are awake may not hear the warning if the alarm is muffled from a stereo, radio, air conditioner or other appliance, or by passing traffic. Finally, alarm warning devices, however loud, may not warn hearing-impaired people or waken deep sleepers.

- Telephone lines needed to transmit alarm signals from a premises to a central monitoring station may be out of service or temporarily out of service. Telephone lines are also subject to compromise by sophisticated intruders.
- Even if the system responds to the emergency as intended, however, occupants may have insufficient time to protect themselves from the emergency situation. In the case of a monitored alarm system, authorities may not respond appropriately.
- This equipment, like other electrical devices, is subject to component failure. Even though this equipment is designed to last as long as 10 years, the electronic components could fail at any time.

The most common cause of an alarm system not functioning when an intrusion or fire occurs is inadequate maintenance. This alarm system should be tested weekly to make sure all sensors and transmitters are working properly.

Installing an alarm system may make one eligible for lower insurance rates, but an alarm system is not a substitute for insurance. Homeowners, property owners and renters should continue to act prudently in protecting themselves and continue to insure their lives and property.

We continue to develop new and improved protection devices. Users of alarm systems owe it to themselves and their loved ones to learn about these developments.

.

Index

#70 command	45	Displays for Multi-Partition and Multi-Panel	
4286 VIP module.....	9, 45	Modes	29
AC Loss.....	59	Duress	16
Access Another Partition.....	21	Duress Code.....	15
Access Door.....	44	Emergency	5
Add a User	18	Entry Delay	14
ADD NEW USER	20	Entry/Exit	6
Add User Code.....	17	Event Log Procedures.....	54
Ademco Dealer	59	Exit Delay	14
Advanced User Interface	5, 10	Exit User Edit Mode.....	17
Alarm	7	Fire	5, 41
Alkaline batteries.....	60	Fire Alarm	57
Armed.....	7	Fire Protection	6
ARMED INDICATOR	13	GLOBAL ARM	19
Audible Emergency	41	Global Arming.....	21
Audible Signals	64	GOTO	18, 21
Authority Level	15	GOTO Command	8
Authority Levels.....	16, 17	Grant- Access Door	44
AWAY.....	7, 21, 38	How to Use Panel Linking	26
AWAY mode.....	35	INSTANT	7, 14, 21
Battery Life	60	INSTANT mode	34
Burglary.....	5	Keypad	5
Burglary Protection.....	7	Keypad back lighting	10
Bypass- Access Door.....	44	Keypads.....	10
Bypass Zones	31	Keyswitch	38
Bypassing.....	31	LO Bat	59
Call Service	58	Low Battery.....	60
Change a User's Code.....	20	Low Battery Warning	61
Change User Code	17	Macros.....	8, 42
CHECK.....	58	Manager	16
Chime	7, 39	Master.....	16
Closing Time	46	Master Keypad	9, 22
Comm. Failure.....	58	MAXIMUM	7, 14, 21
Common Lobby.....	24	MAXIMUM mode	36
Delaying Closing Time	46	Memory of Alarm	7, 37
Delete a User	20	Messages	40
Delete User Code.....	17	Modem Comm	59
Device Timers	8, 49	MULTI-ACCESS.....	18
Disarm	37	Multi-Panel View Mode.....	28
		Multi-Partition Multi-Panel Mode	27

NIGHT	34	Sensing Devices	6
Not Ready	30	Silencing A Fire Alarm	57
OFF	21, 37	Silent Emergency.....	41
Open Zones.....	30	Single-Partition Single-Panel Mode	26
Open/Close Schedules.....	46	Smoke Detectors	56
Operator A	16	Speed Key	42
Operator B.....	16	SPEED KEY	8
Operator C.....	16	STAY	7, 21, 38
OUTPUT TIMER	49	STAY mode	33
Panel Linking.....	6, 26	Symphony.....	5, 10
Panic Keys	41	System LO Bat.....	59
PANIC KEYS.....	13	System Overview	5
Partitioned Security System	5	TeleCommand	9
Partitioned System	5	Temporary Schedules.....	46, 47
Personal Emergency.....	41	Temporary Users	18
Phone Access	9	Test Key.....	56
POWER/READY INDICATOR	13	Test mode.....	56
Protect- Access Door	44	Testing Your System	56
Quick Arm.....	13	Time Time period.....	46
Quick Arming.....	15	TRBL.....	58
Quick Bypass	32	Trouble Condition	58
Quick Guide.....	62, 63	UNABLE TO ARM COMMON AREA PART	25
READY	30, 39	UNABLE TO ARM LOBBY	24
Ready Key	30	User Edit Mode	17
Relay Menu Mode	45	User Numbers.....	15
Replacing Batteries	60	User's Instructions	9
RF BUTTON.....	18	WARRANTY	71
Routine Care	61	Wireless Sensor.....	60
Schedules.....	8, 46	Zone Bypassed.....	33
Security Code.....	15	Zones.....	6
Security Codes	15		

.

ONE YEAR LIMITED WARRANTY

Honeywell International Inc., acting through its Security & Custom Electronics business ("Seller"), 165 Eileen Way, Syosset, New York 11791, warrants its security equipment (the "product") to be free from defects in materials and workmanship for one year from date of original purchase, under normal use and service. Seller's obligation is limited to repairing or replacing, at its option, free of charge for parts, labor, or transportation, any product proven to be defective in materials or workmanship under normal use and service. Seller shall have no obligation under this warranty or otherwise if the product is altered or improperly repaired or serviced by anyone other than the Seller. In case of defect, contact the security professional who installed and maintains your security equipment or the Seller for product repair.

This one year Limited Warranty is in lieu of all other express warranties, obligations or liabilities. THERE ARE NO EXPRESS WARRANTIES, WHICH EXTEND BEYOND THE FACE HEREOF. ANY IMPLIED WARRANTIES, OBLIGATIONS OR LIABILITIES MADE BY SELLER IN CONNECTION WITH THIS PRODUCT, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, ARE LIMITED IN DURATION TO A PERIOD OF ONE YEAR FROM THE DATE OF ORIGINAL PURCHASE. ANY ACTION FOR BREACH OF ANY WARRANTY, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY, MUST BE BROUGHT WITHIN 12 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL SELLER BE LIABLE TO ANYONE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, OR UPON ANY OTHER BASIS OF LIABILITY WHATSOEVER, EVEN IF THE LOSS OR DAMAGE IS CAUSED BY THE SELLER'S OWN NEGLIGENCE OR FAULT. Some states do not allow limitation on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Seller does not represent that the product may not be compromised or circumvented; that the product will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; or that the product will in all cases provide adequate warning or protection. Buyer understands that a properly installed and maintained alarm may only reduce the risk of a burglary, robbery, fire or other events occurring without providing an alarm, but it is not insurance or a guarantee that such will not occur or that there will be no personal injury or property loss as a result. CONSEQUENTLY, SELLER SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE OR OTHER LOSS BASED ON A CLAIM THE PRODUCT FAILED TO GIVE WARNING. HOWEVER, IF SELLER IS HELD LIABLE, WHETHER DIRECTLY OR INDIRECTLY, FOR ANY LOSS OR DAMAGE ARISING UNDER THIS LIMITED WARRANTY OR OTHERWISE, REGARDLESS OF CAUSE OR ORIGIN, SELLER'S MAXIMUM LIABILITY SHALL NOT IN ANY CASE EXCEED THE PURCHASE PRICE OF THE PRODUCT, WHICH SHALL BE THE COMPLETE AND EXCLUSIVE REMEDY AGAINST SELLER. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No increase or alteration, written or verbal, to this warranty is authorized.

Honeywell

165 Eileen Way, Syosset, New York 11791

Copyright © 2004 Honeywell International Inc.

www.honeywell.com/security



N5943-8V4 7/04 Rev A